



INSTRUCTION MANUAL

LONGINES is delighted you have chosen a timepiece from its collection, which lives up to the brand's long-established know-how, based on research combined with technical excellence and timeless elegance.

La Compagnie des Montres Longines, Francillon S.A. grants you, with effect from the purchase date, a twenty-four (24) month warranty on all LONGINES® watch models and a five (5) year warranty on mechanical watches purchased from January 1, 2021, under the terms set out in this warranty. All watch straps and bracelets are covered by a 24-month international warranty for any material or manufacturing defects. The LONGINES international warranty covers material and manufacturing defects that exist at the time of delivery of the LONGINES watch purchased ("defects"). The warranty takes effect only if the warranty certificate has been dated and fully completed by an official LONGINES dealer ("valid warranty certificate"). During the term of the warranty and on presenting the valid warranty certificate, you are entitled to have any defect repaired free of charge. In the event that repairs cannot restore your LONGINES watch to normal working order, La Compagnie des Montres Longines, Francillon S.A. undertakes to replace it with an identical LONGINES watch or another LONGINES watch with similar characteristics. The warranty for the replacement watch expires on the same date as the warranty for the replaced watch.

The warranty does not cover:

- battery life;
- normal wear and tear (such as scratches on the case and/or crystal; colour and/or material alteration of cases, straps and chains made of leather, fabric, rubber or any other non-metallic material; the PVD coating; the colour of bronze);
- damage to any part of the watch resulting from unsuitable/improper use, neglect, carelessness, accidents (impacts, dents, crushing, scratches when changing the strap/bracelet, etc.), incorrect use of

- the watch, or failure to follow the instruction manual;
- any kinds of indirect or consequential damage or losses resulting from using the LONGINES watch or from any operational failure, defect or lack of precision in the watch;
- a LONGINES watch handled by non-approved person (for example, for the purposes of replacing the battery or carrying out servicing or repairs), or having been altered from its original state other than under the supervision of La Compagnie des Montres Longines, Francillon S.A.

Any other claims against La Compagnie des Montres Longines, Francillon S.A., for example for any kinds of damage or losses other than those set out in this warranty, are expressly excluded, excepting statutory rights that the purchaser can assert against the manufacturer.

This manufacturer's warranty:

- is independent of any warranty that may be provided by the vendor and for which the vendor accepts sole responsibility;
- in no way affects the purchaser's rights against the vendor nor any other statutory right the purchaser may have against the vendor.

The Customer Service department of La Compagnie des Montres Longines, Francillon S.A. ensures your LONGINES watch is perfectly maintained. If your watch needs servicing, entrust it to an official LONGINES dealer or an approved LONGINES Service Centre as listed on our website at www.longines.com: their servicing is guaranteed to comply with the standards of La Compagnie des Montres Longines, Francillon S.A.

* Compagnie des Montres Longines, Francillon S.A., CH-2610 Saint-Imier, Switzerland.
LONGINES® is a registered trademark.

We are delighted you have become the owner of a LONGINES watch. We recommend you read this instruction manual carefully before using your LONGINES watch for the first time in order to ensure its correct operation and long life. If you would like to find out more about your watch or if it is fitted with a complication, you can find detailed information and tutorials by going to our website at www.longines.com/instruction-manual or by scanning the QR code.



Precautions concerning water-resistance


A watch's water-resistance can be affected by changes caused by the gaskets drying out, or an accidental impact on the crown. To help maintain your watch's water-resistance, we recommend rinsing it in fresh water after any contact with sea water and having its water-resistance checked once a year by an approved LONGINES Service Centre. In no circumstances should you open your watch yourself.

IMPORTANT! Never activate the time-setting crown and/or push-pieces when the watch is underwater, and ensure that the crown and push-pieces are pushed in or screwed down before any immersion in water.

International warranty	2
Water-resistance	3
Setting the time	4
Longines warranty card	7
Warning	8

Marking on the case-back	Meaning*
None	Not water-resistant
3 bar 	Water-resistant up to an overpressure of 3 bar (30 m)*
5 bar 	Water-resistant up to an overpressure of 5 bar (50 m)*
10 bar 	Water-resistant up to an overpressure of 10 bar (100 m)*
30 bar 	Water-resistant up to an overpressure of 30 bar (300 m)*

*The water-resistance values indicated in metres are equivalent to the overpressure applied under standard ISO 22810.

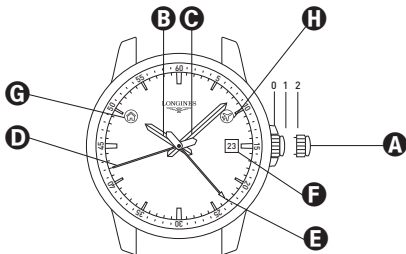**A** Crown**B** Hour hand**C** Minute hand**D** Seconds hand**E** GMT/24H hand**F** Date window**G** Home time**H** Travel time

Hour, minute, seconds, date and second time zone time display


Screw-in crown

Some LONGINES models are equipped with a screw-in crown, which must be unscrewed before setting the time, correcting the date or winding, by turning it anti-clockwise. After making the settings, return the crown to position **1**, then push it back in and screw it in firmly in order to ensure the watch's water resistance.

First use

THE WATCH IS DELIVERED IN "ENERGY SAVING" MODE. The watch hands are factory-set to 12 o'clock, and the crown is held in position **2** by a black clip placed around the winding stem. This part must be removed before first using the watch. Check with your retailer that this operation has been performed. If not, follow the procedure below. Remove the black clip to release the crown.

Push the crown back into position **1**: the watch is automatically set to the Swiss time and date. You can then set the local time (refer to the "time-setting" section).

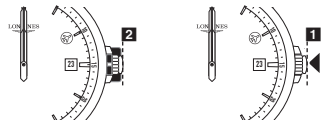

IMPORTANT

If the crown is pulled out to position **2** for more than 60 seconds, the watch will automatically revert to "energy saving" mode, and the hands will return to 12 o'clock.

Selecting the display mode ("swap" function)

DISPLAY MODE INDICATOR: briefly push the crown into position **0**: the seconds hand will temporarily move to: **G** (at 10 o'clock) or **H** (at 2 o'clock). **CHANGE DISPLAY MODE:** briefly push the crown twice into position **0** to switch between display modes.

After 3 seconds, the seconds hand will return to standard mode.



Home time



Travel time

Time-setting

Follow the procedure below to set the time manually:

- in Home mode:

Pull the crown out to position **2**. Turn the crown either way to the desired time display. **ROTATE THE CROWN SLOWLY** to set minute by minute - the seconds hand will automatically return to 12 o'clock. **ROTATE THE CROWN QUICKLY** to set hour by hour - the hand will move one hour forward or backward. Once the time is synchronised, push the crown back into position **1**.

- in Travel mode:

Pull the crown out to position **2**. Turn the crown either way to the desired time display. **TURN THE CROWN SLOWLY** to set the time in 15-minute steps. **TURN THE CROWN QUICKLY** to set hour by hour - the hand will move forward or backward by one hour. Once the time is synchronised, push the crown back into position **1**.

Date correction

Pull the crown out to position **2**. Turn the crown quickly either way, to move the hour hand forward or backward in successive one-hour steps, without affecting the minute and seconds displays.

When the hour hand passes midnight, the calendar will automatically display a new date - either the next day or the previous day, depending on the direction of correction. Hence there is a limit of +/- 1 day, so as not to disrupt the perpetual calendar. Push the crown back into position **1**.

End of life (E.O.L.) and end of energy (E.O.E.)

The watch indicates that the battery is reaching its end of life via one of its hands jumping every 5 seconds. After approximately six months in this mode, the watch will switch to E.O.E. mode: the hands will stop at 12 o'clock. If the watch battery is replaced in E.O.L. mode or within six months of switching to E.O.E. mode, you will not need to adjust the perpetual calendar. If however the battery is replaced after this period, an approved watchmaker will need to program the perpetual calendar.

Scanning the QR code on your watch's warranty card with your smartphone's camera gives you access to the LONGINES website. There you will find the specific instruction manual for your watch, available in 33 languages, together with advice for maintaining your watch and the warranty terms.



You can also access this information via the QR code within this instruction manual, or by going to: **www.longines.com/instruction-manual**

 WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.

Even used batteries may cause severe injury or death.

Call a local poison control center for treatment information.

Battery type and nominal voltage : 317-321-335-346-364-371-373-377-379 /1.55 V.

Non-rechargeable batteries are not to be recharged.

Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

This product contains a battery that is not intended to be replaceable by the user.



www.longines.com/instruction-manual