# LONGINES

**INSTRUCTION MANUAL** 



LONGINES is delighted you have chosen a timepiece from its collection, which lives up to the brand's long-established know-how, based on research combined with technical excellence and timeless elegance.

La Compagnie des Montres Longines, Francillon S.A. grants you, with effect from the purchase date. a twenty-four (24) month warranty on all LONGINES® watches models and a five (5) year warranty on the mechanical watches purchased from January 1, 2021, under the terms set out in this warranty. All watch straps and bracelets are covered by a 24-month international warranty for any material or manufacturing defects. The LONGINES international warranty covers defects in materials and manufacturing that exist at the time of delivery of the LONGINES watch purchased ("defects"). The warranty takes effect only if the warranty certificate has been dated and fully completed by an official LONGINES dealer ("valid warranty certificate"). During the term of the warranty and on presenting the valid warranty certificate. you are entitled to have any defect repaired free of charge. In the event that repairs cannot restore your LONGINES watch to full working order, La Compagnie des Montres Longines, Francillon S.A. undertakes to replace it with an identical LONGINES watch or another LONGINES watch with similar characteristics. The warranty for the replacement watch expires on the same date as the warranty for the replaced watch.

#### The warranty does not cover:

- · battery life:
- normal wear and tear (such as scratches on the case and/or glass; alteration of the colour and/ or material of cases, straps, bracelets and chains made of leather, textile, rubber or any other non-metallic material; the PVD coating; the colour of bronze).
- damage to any part of the watch resulting from unsuitable/improper use, neglect, carelessness,

- accidents (knocks, dents, crushing, scratches when changing the strap/bracelet, etc.), incorrect use of the watch, or failure to follow the instruction manual:
- harm of any nature whatsoever resulting directly or indirectly from using the LONGINES watch or from any operational failure, defect or lack of precision in the watch;
- a LONGINES watch handled by non-approved person (for example, for the purposes of replacing the battery or carrying out servicing or repairs) or having been altered from its original state other than under the supervision of La Compagnie des Montres Longines, Francillon S.A.

Any other claims against La Compagnie des Montres Longines, Francillon S.A., for example for any kinds of damage or harm other than those set out in this warranty, are expressly excluded, excepting statutory rights that the purchaser can assert against the manufacturer.

#### This manufacturer's warranty:

- is independent of any warranty that may be provided by the vendor and for which the vendor accepts sole responsibility:
- in no way affects the purchaser's rights against the vendor nor any other statutory right the purchaser may have against the vendor.

The Customer Service department of La Compagnie des Montres Longines, Francillon S.A. ensures your LONGINES watch is perfectly maintained. If your watch needs servicing, entrust it to an official LONGINES dealer or an approved LONGINES Service Centre as listed on our website at www.longines.com: their servicing is guaranteed to comply with the standards of La Compagnie des Montres Longines. Francillon S.A.

\*Compagnie des Montres Longines, Francillon S.A., CH-2610 Saint-Imier, Switzerland. LONGINES® is a registered trademark. We are delighted you have become the owner of a LONGINES watch. We recommend you read this instruction manual carefully before using your LONGINES watch for the first time in order to ensure its correct operation and long life. If you would like more information about your watch or if it is fitted with a complication, you can find detailed information and tutorials by going.

to our website at www.longines. com/instruction-manual or by scanning the QR code.



International warranty	2
Water-resistance	3
Setting the time	4
Longines warranty card	7
Warning	8


## Precautions concerning waterresistance

A watch's water-resistance can be affected by changes caused by the gaskets drying out, or an accidental shock to the crown. To help maintain your watch's water-resistance, we recommend rinsing it in soft water after any contact with sea water and having its water-resistance checked once a year by an approved LONGINES Service Centre. In no circumstances should you open your watch yourself.

IMPORTANT! Never activate the time-setting crown and/or push-pieces when the watch is underwater, and ensure that the crown and push-pieces are pushed in or screwed down before any immersion in water.

Marking on the case- back	Meaning*
None	Not water-resistant
3 bar (3 bar)	Water-resistant up to an overpressure of 3 bar (30 m)*
5 bar <b>Sbar</b>	Water-resistant up to an overpressure of 5 bar (50 m)*
10 bar 10 bar	Water-resistant up to an overpressure of 10 bar (100 m)*
30 bar 30bar	Water-resistant up to an overpressure of 30 bar (300 m)*

<sup>\*</sup>The water-resistance values indicated in metres are equivalent to the overpressure applied under standard ISO 22810.

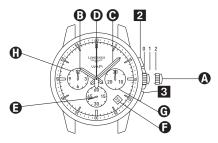

♠ Crown	3 Small seconds	2 Start/stop push-piece. Engage and disengage the chronograph hand and	
Hour hand	Date window		
Minute hand	<b>@</b> 30-minute counter	counters	
<ul><li>Chronograph seconds hand</li></ul>	12-hour counter	3 Chronograph hand and counters reset push-piece	

Can time events lasting up to 12 hours

#### Screw-in crown

Some LONGINES models are equipped with a screw-in crown, which must be unscrewed before setting the time, correcting the date or winding, by turning it anti-clockwise. After making the settings, return the crown to position 1, then push it back in and screw it in firmly to ensure the watch's water resistance.

#### First use

THE WATCH IS DELIVERED IN "ENERGY SAVING" MODE The watch hands are factory-set to 12 oclock, and the crown is held in position 2 by a black clip placed around the winding stem. This part must be removed before first using the watch. Check with your retailer that this operation has been performed. If not, follow the procedure below: Remove the black clip to release the crown. Push the crown back into position 1; the watch is automatically set to the Swiss time and date. You can then set the local time (refer to the "time-setting" section).



#### IMPORTANT

If the crown is pulled out to position **2** for more than 60 seconds, the watch will automatically revert to "energy saving" mode, and the hands will return to 12 o'clock.

# Time-setting

Pull the crown out to position 2. Turn the crown either way to the desired time display. ROTATE THE CROWN SLOWLY to set minute by minute - the second hand will automatically return to 12 oclock. ROTATE THE CROWN QUICKLY to set hour by hour - the hand will move one hour forward or backward. As soon as the time is synchronised, push the crown back into position 1.

#### Date correction

Pull the crown out to position 2. Turn the crown quickly either way, to move the hour hand forward or backward in successive one-hour steps, without affecting the minute and seconds displays.

When the hour hand passes midnight, the calendar will automatically display a new date - either the next day or the previous day, depending on the direction of correction. Hence there is a limit of +/- 1 day, so as not to disrupt the perpetual calendar. Push the crown back into position 1.

# End of life (E.O.L.) and end of energy (E.O.E.)

The watch indicates that the battery is reaching its end of life via one of its hands jumping every 5 seconds. After approximately six months in this mode, the watch will switch to E.O.E.mode: the hands will stop at 120 clock. If the watch battery is replaced in E.O.L. mode or within six months of switching to E.O.E. mode, you will not need to adjust the perpetual calendar. If however the battery is replaced after this period, an approved watchmaker will need to program the perpetual calendar.

### Chronograph function (partial times)

Used for measuring successive events, but not the intervals between them. Each result is automatically added to the preceding one. To time the various stages of a car rally, for example, follow the procedure below:

At the start of the first stage, press push-piece 2: the chronograph will **start**.

At the end of the first stage, press push-piece again: the chronograph will **stop**. Repeat for each stage of the rally. At the end of the final

stage, the chronograph will show the final time for the rally, in other words, the accumulated time for all the stages. Press push-piece **B** to **reset**. After 36 hours' timing, the movement assumes that you have left it on by mistake, and to save the watch battery, automatically resets the chronograph.


# Split-seconds function (intermediate time)

At the start of the race, press push-piece 21 the chronograph will start. Press push-piece 31 to see the first split time; the chronograph seconds and 30-minute hands will stop. To continue timing, press push-piece 13. The chronograph hands will jump to the time elapsed since the start of the race. The split-seconds function and stop can be alternated indefinitely by pressing push-piece 31. Press push-piece 12 the chronograph will stop. The chronograph will now display the total race time. Press push-piece 31 to reset.

# LONGINES

Scanning the QR code on your watch's warranty card with your smartphone's camera gives you access to the LONGINES website. There you will find the specific instruction manual for your watch, available in 33 languages, together with advice for maintaining your watch and the warranty terms.



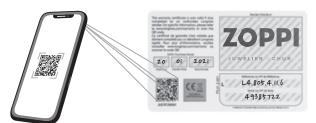

You can also access this information via the QR code to be found in the instruction manual, or by going to: www.longines.com/instruction-manual



# **M** WARNING

- INGESTION HAZARD: This product contains a button cell or coin battery.
- . DEATH or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
- KEEP new and used batteries OUT OF REACH OF CHILDREN
- Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.



Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.

Even used batteries may cause severe injury or death.

Call a local poison control center for treatment information.

Battery type and nominal voltage: 317-321-335-346-364-371-373-377-379 /1.55 V.

Non-rechargeable batteries are not to be recharged.

Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

This product contains a battery that is not intended to be replaceable by the user.

